


# Operating Door Locks for Cabins and Nature Center

## Exterior Assembly

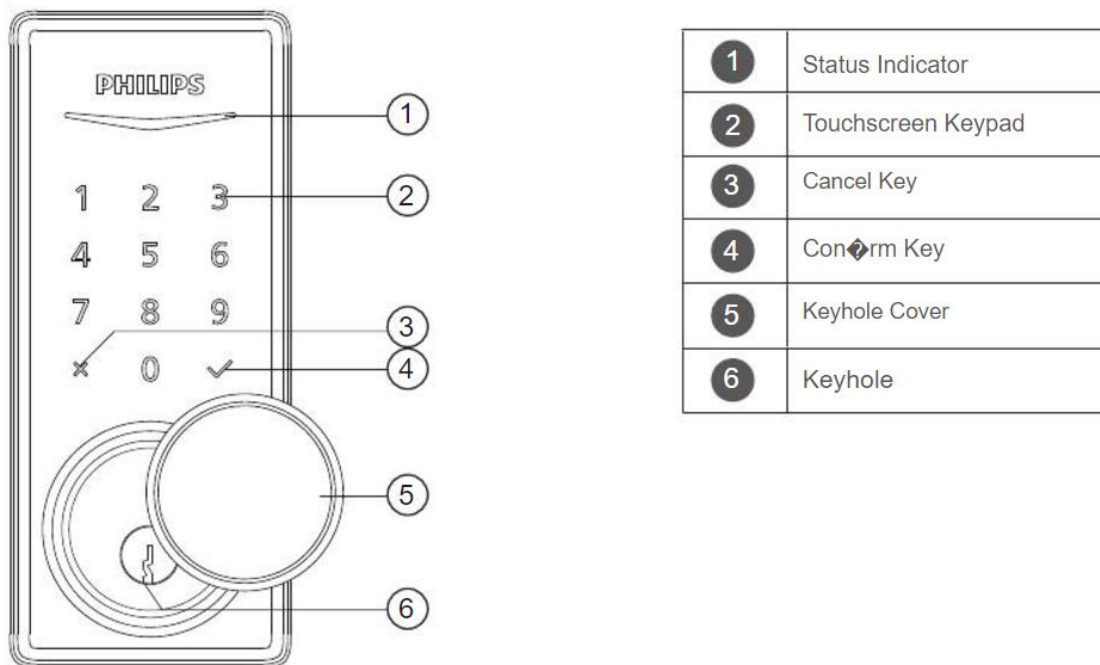

You will have selected a four-digit entry code upon completing your reservation. The Phillips locks are programmed with this code. First, tap the touch screen to awaken the lock. Enter your code. You will hear a corresponding beep with each number entered. Press the confirm key (4).

To lock the door, awaken the lock by tapping the screen. Then press the confirm key (4).

### Privacy Mode

Press and hold the Privacy Button on the interior assembly for 3 seconds to activate Privacy Mode. This will restrict exterior pin and remote access. Privacy mode is automatically disabled by turning the interior dead bolt upon exit.

### Troubleshooting

Contact park staff at 563-357-4134 if you are having issues. They may be able to remotely access the locks address your concerns.